
# **Vario PRO Underfloor Heating** and Uncoupling System



For floors prone to cracking and delamination

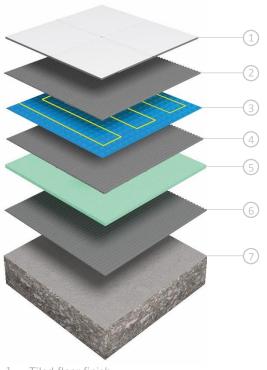

- Tiled floor finish
- Flexible tile adhesive
- Vario Pro heating system
- Flexible tile adhesive
- Econoboard uncoated insulation board
- Flexible tile adhesive
- Concrete substrate



#### **Underfloor heating**

Vario ProMat is designed to make it easy to install electric underfloor heating and an uncoupling membrane with one fast track solution.



#### **Uncoupling layer**

Vario ProMat neutralises the stress caused by different rates of expansion and contraction in a tiled floor. This minimises the risk of tile delamination and cracking.



#### Superior vapour management

The studs in the Vario ProMat allow water vapour to escape effectively. This means you can save more time by tiling over a substrate that is not fully cured.



#### Easy waterproofing

Vario ProMat is totally waterproof, and by using Vario PRO sealing tape on edges and penetrations you can create a wetroom quickly and easily.



#### Efficient load distribution

Heavy loads are no problem for floors that include a layer of Vario PRO. The stud structure transfers the load to the sub floor eliminating the risk of cracks.

# **Technical Data**



Thickness	5.5mm	
Max. Temperature	28°C *	
Protection Rating	IP68	
Warranty	Lifetime	
Wattage	195W/m <sup>2</sup> **	
Conductor Type	Single Ended	
Cold Tail Length	5m	

- \*Regulated by floor sensing thermostat
- \*\*Based on installing the cable at two dimple spacing















### **Installation Overview**

Vario PRO underfloor heating system is quick and easy to install. This overview gives a guide to the basics. Always read the instruction sin full before attempting your own installation.



Spread tile adhesive
Spread a flexible cement
based tile adhesive over the
floor.



Lay the membrane
Roll the membrane out over
the whole floor and press
into the adhesive.



Install the cable
Press the heating cables into
the membrane, in the areas
that you want to be heated.



Install the tiles
Use a flexible adhesive to fix
your tiled floor finish directly
over the membrane.

This is an illustrative guide only. Read the instruction manual that is supplied with the system in full before attempting installation.

# Vario PRO heating cable

Stock Code	Length (m)	Area (m²)	Output (W)	Resistance (Ω)
109012	12	0.8	150	352.7
109018	18	1.2	225	235.1
109025	25	1.6	300	176.3
109031	31	2.1	375	141.1
109037	37	2.6	450	117.6
109050	50	3.2	600	88.2
109062	61	3.9	750	70.5
109075	75	4.8	900	58.8
109100	100	6.4	1200	44.1
109125	125	8.0	1500	35.3
109150	150	9.6	1800	29.4
109200	200	12.8	2400	22.0

# Vario PRO installation accessories

Stock Code	Description	Size
109500	Vario PROMat Uncoupling	15 x 1m
109505	Vario PROMat Uncoupling	5 x 1m
109510	Vario PRO Sealing Tape	50m

