
## **Econoboard Uncoated Insulation**

For installation beneath underfloor heating on a concrete substrate

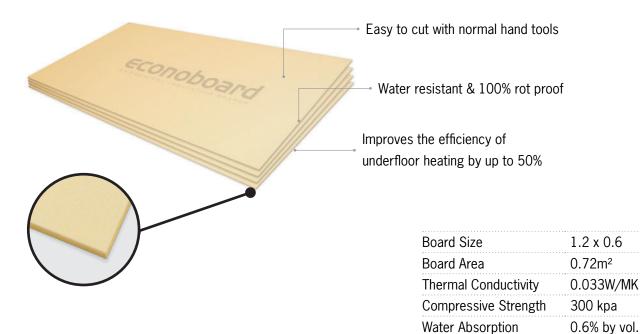


-50°C to +75°C



## **Installation Overview**

Solid concrete floors and screeds absorb the cold and damp from below. Econoboard should be used before tiling to inhibit moisture and prevent heat loss into the substrate.

Uncoated Econoboard is not recommended for use where a waterproofing layer will be applied directly over the insulation. In this application please use the Coated Econoboard.

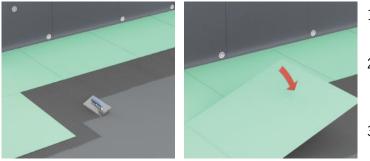

1. Ensure substrate is secure and free from dust and any debris.

Temperature Range

- 2. Mix tile adhesive according to manufacturer guidelines and spread on substrate with a notched towel.
- 3. Fix in position by pressing the boards firmly into the adhesive.

Stock Code	Thickness (mm)	Pack Quantity	Pack Area (m <sup>2</sup> )	R Value (m <sup>2</sup> k/w)
6012	6	20	14.4	0.18
6014	10	10	7.2	0.3



1300 368 631 sales@thermogroup.com.au www.thermogroup.com.au